


# Instant Pot<sup>®</sup> Plus Mini/DUO Plus 60/Duo Plus 80 Quick Reference Guide

The following are display messages that are often seen on the LCD screen:

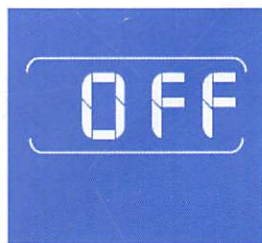

Cooker is in Standby Mode




Display of Delay Start Count Down (Sample Time)




Pressure Cook Preheating in Progress



Display of Keep Warm Time (Sample Time)

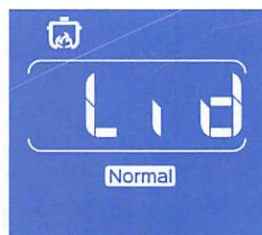

Safety Warning: Check Lid

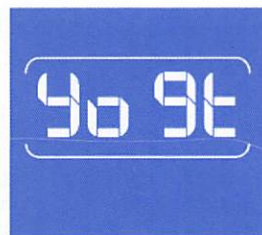

Yogurt Program Cycle is Complete



Sauté Temperature is Reached



Milk is being Pasteurized



Display of Pressure Cooking Time (Sample Time)



Display of Slow Cook Count Down (Sample Time)

Less **Normal** More

Adjust pre-set cooking times (for pressure cooking) or temperatures (for non-pressure cooking) by repeatedly pressing the relevant cooking program key to Less, Normal or More

# Instant Pot® Plus Mini/DUO Plus 60/Duo Plus 80 Quick Reference Guide


**\*Please read the Important Safeguards section before use. For more detailed operation instructions, please read the user manual carefully before use.\***

## Cooking Program Operations


**Note:** Cooking program starts automatically in 10 seconds after a selection is made.

Press **Cancel Key** to 1) cancel a cooking progress at any time or 2) return the cooker to standby mode.


## Pressure Cooking Programs

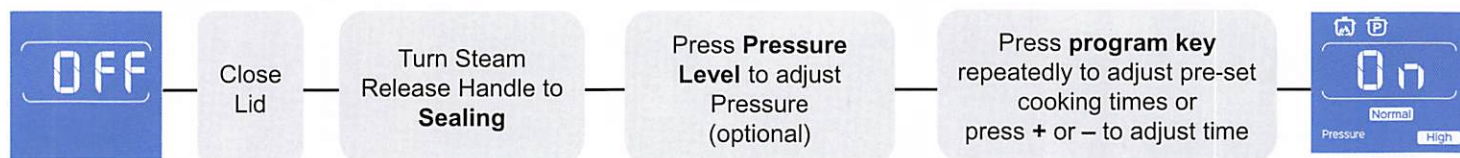

## Sauté

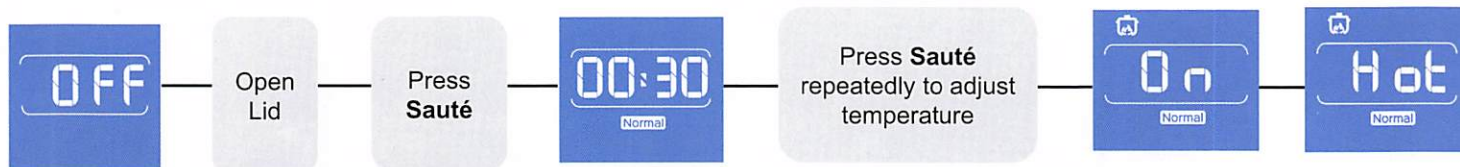

## Slow Cook

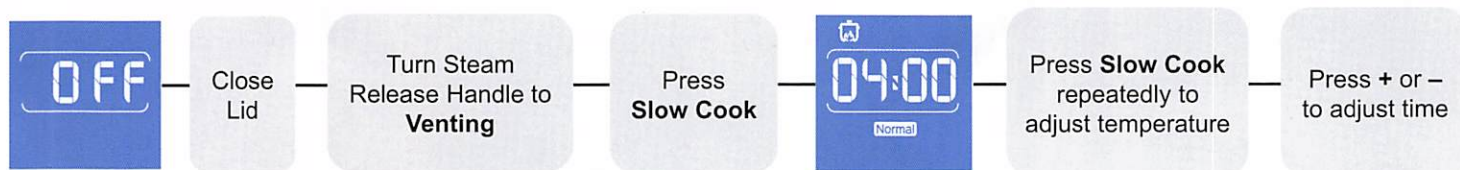

## Yogurt & Jiu Niang (Sweet Fermented Rice)



## Milk Pasteurization

